

Coffee grounds disposal / drip drain set GIGA Instructions for use

## **Table of contents**

Supplied as standard		5
	Tools required	
	Installation	
	Preparation	
	Coffee grounds disposal function	
	Drip drain	
	Final jobs	7
3	JURA contact details	7

# Supplied as standard



**Information about operating the coffee machine with the coffee grounds disposal / drip drain set:** To deactivate the coffee machine's coffee grounds counter, you must activate the direct disposal option using the customer software.

# 1 Tools required

- Drill
- File
- in addition for coffee grounds disposal function
  - 60 mm core drill bit
  - 70 mm core drill bit
- in addition for drip drain
  - Core drill bit of at least 35 mm

#### 2 Installation

#### Preparation

- Switch off coffee machine.
- ► Unplug from the power socket.
- ► Remove the water tank.
- Open the service cover on the back of the machine by pressing above the JURA logo.
- Push the red sliding catches completely to the rear to close the bean containers.
- ► Turn the blue locking devices outwards.
- ► Remove both bean containers.
- Remove drip tray and coffee grounds container.
- ► Carefully lay the coffee machine on its back.

### Coffee grounds disposal function

- i If you only want to install the coffee grounds disposal function, use the drip tray for the coffee machine.
  - Drill hole in underside of drip tray (with 60 mm core drill bit).



Deburr drilled hole with a file.

- ► Fit coffee grounds funnel in drip tray.
- Drill hole for coffee grounds disposal in tabletop (70 mm core drill bit). For position, see illustration on last page of these instructions for use.
- ► Remove round cover.



► Insert tube section and tighten.




- ► Set coffee machine upright again.
- ► Position coffee machine with tube section over hole in tabletop.

### Drip drain

- i If you only want to install the drip drain or the drip drain along with the coffee grounds disposal function, please use the **drip tray** and cup grille supplied in this set. The valve for the drip drain is already integrated in this drip tray.
  - Drill hole for drain hose in tabletop (core drill bit of at least 35 mm; distance from machine of at least 40 mm). For position, see illustration on last page of these instructions for use.

► Slide drain hose into guide until it clicks.

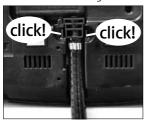

- ► Set coffee machine upright again.
- ► Guide drain hose through hole in tabletop.
- i If you also want to install the coffee grounds disposal function in addition to the drip drain, please use the **drip tray** and cup grille supplied in this set. Then follow the steps in the 'Coffee grounds disposal function' section with this drip tray.

### Final jobs

- ► Fit drip tray.
- ► Fit water tank.
- ► Fit both bean containers.
- ► Turn the blue locking devices inwards.
- Pull the red sliding catches completely to the front to open the bean containers again.
- Refit the service cover and fix it by pressing above the JURA logo. It will click into place audibly.
- ▶ Plug the machine into the power socket.
- Switch on coffee machine.

## 3 | JURA contact details

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten Tel. +41 (0)62 38 98 233

> You will find additional contact details for your country at www.jura.com.

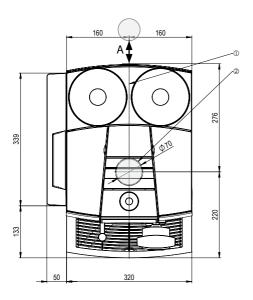


Figure: Position of tube section for coffee grounds disposal (2) and drain hose (1) on bottom of machine (minimum distance (A) of hole from machine: 40 mm).